



Figure 21. Opening the windmill sails

When the sails are set and the windmill is running, the variable stroke lever can be adjusted as desired, and the windmill left to run while the operator does other work nearby in the field. For maximum water output, however, the operator should stay on the windmill platform and continuously adjust the lever back and forth as the wind gusts and lulls.